



## Changing Electronica EL300 Scale Read Direction

Congratulations on the purchase of your Electronica digital readout kit. This article addresses how to change the scale read direction. These steps need only be accomplished once.

**Before programming your display, make sure the scales are properly installed. The “hash marks” on the readhead and the scale body must be installed on the same ‘side’ or the display will flicker.**

With the display on, **push the “SETUP” button once** – it’s the lower left most button on the display.

You should see “Enter LoC” on the display.

Push **9 5 1 4 7** followed by the enter key

You should see “SELEct” on the display.

***For the sake of discussion, we’ll assume we want to change which direction the “X” scale is reading.***

**Push the “X” key once.** The display should now read “LinEAR”.

**Push the “2” key five times.** The display should now read “LEFt”. This is the default read direction.

**Push the “4” key once.** The display should now read “riGHt”. This has now changed the “direction” the scale reads.

**Push the “2” key six times.** The display should now read “End”.

**Push the “ent” key once.** The display should now be back in the normal operating mode.

Congratulations, you’re finished! Your settings are retained in memory, and need not be entered again.

**DRO PROS**